

# O'DAY 23 SPINNAKER GEAR INSTALLATION INSTRUCTIONS

## INSTRUCTIONS - MAST HARDWARE

### Spinnaker Pole Track

The track is located on the front of the mast in a vertical position. With the bottom of the track located 3' from the base of the mast, drill a 3/16" hole in one of the holes to one side of the track and insert a rivet. Being sure the track is straight, drill a second hole in the top of the track on the opposite side and insert a second rivet. Now that the track is held in place, drill and install the rest of the rivets.

The spinnaker pole-eye slide is then placed on the track with the eye at the top.

At the bottom of the track and centered you'll see a 1/4" hole; drill the mast through this hole with the 3/16" drill bit and screw in the single 1/4" X 1" round head bolt. This serves as a pole-eye slide stop.

### 03-05 Swivel Block with Shackle

This is used for the spinnaker halyard. Attach the shackle and block to the loop located on the forward end of the masthead.


### 02-05 Block on Strap

This is used for the spinnaker pole-lift line. The strap is installed with the strap in a vertical position and is located directly between the spreaders on the front of the mast. Use a 1/8" drill bit and two #8 X 1/2" self-tapping screws.

### Cheek Blocks

These are used to lead the spinnaker halyard and pole-lift line to the cam-action cleats located on the deck. Position these blocks 3 1/4" from the base of the mast. The closed end of the sheave should be on the bottom and the blocks should be located on each side of the mast. Tilt the top of the blocks slightly aft since the lines will be leading in from above. Use a 1/8" drill bit and 4 - #8 X 1/2" self-tapping screws.

BANGOR PUNTA MARINE  
 848 AIRPORT ROAD  
 FALL RIVER, MA 02722  
 (617) 678-5291

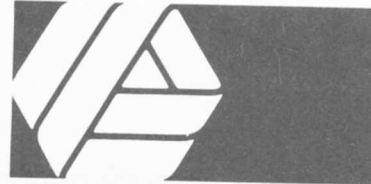

**BANGOR  
 PUNTA  
 MARINE**

## O'DAY 23 SPINNAKER GEAR

### Kit Contains:

Quantity	Description	Part #
2	03-84 blocks	23837
3	cam cleats	23075
1	02-60 block	22882
2	cheek blocks	22901
1	03-05 block	23430
1	02-05 block	23239
1	eye strap	22870
1	track (3' long)	52268
1	track slide	23308
1 set*	lines	73638
1	pole	22715
1	1/4" X 1" PH bolt	60611
26	rivets	21183
10	#8 X 1/2" PH screws	60928
12	#8 X 1 1/2" PH screws	60972
4	10-24 X 2" OH bolts	60416
4	#10 washers	60002
4	10-24 locknuts	60136

### INSTRUCTIONS - DECK HARDWARE

Remove the aft end stop on the genoa track and slide the 03-84 block on and replace the end stop (one per side).\*\* See photo IV.


Attach one cam cleat on the starboard side, 5 1/2" forward of leading edge of companionway bulkhead and in the center of the non-skid, using the #8 X 1 1/2" PH screws.\*\* See photo I.

Attach the other two cam cleats on the port side, 5 1/2" forward of leading edge of companionway bulkhead and spaced evenly on center of non-skid, using the #8 X 1 1/2" PH screws.\*\* See photo II.

Attach the 02-60 block 2 1/4" aft of anchor locker in the smooth center of the deck, using the 10-24 X 2" OH bolts with nuts and washers.\*\* See photo III.

\* Includes: Halyard, Pole Lift, Pole Down Haul (forward guy) and two sheets.

\*\* When putting on any deck hardware, it should be bedded or rebedded using a good quality sealer.

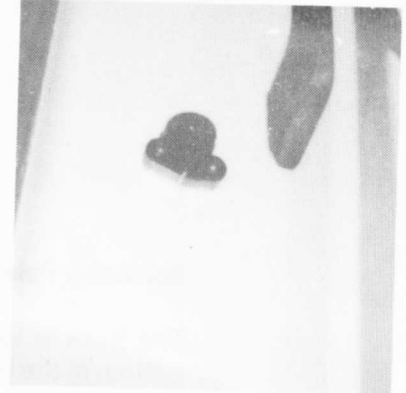


I



II



III

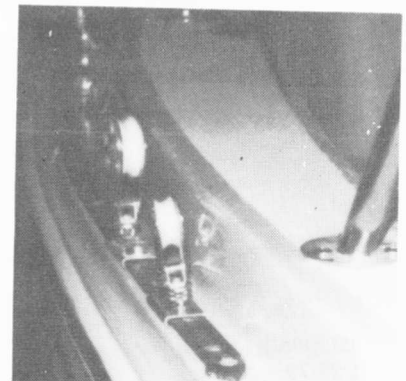

IV

JS/JH/lh  
 1/22/79